

Polycom® KIRK® 5020 / 5040



User Guide

Congratulations

on your new 5020 / 5040 Handset

Your new handset will provide you with the greatest possible degree of flexibility and mobility due to high battery capacity, practical weight, size and design.



Contents

1	Getting Started	7
1.1	Handset Information	7
1.2	Charger Information	7
1.3	Battery Information	8
1.4	Installing Battery	8
1.5	Charging Battery	9
1.6	Battery Capacity	10
1.7	Battery Disposal	11
2	About Your 5020 / 5040 Handset	12
2.1	Handset Display	14
2.1.1	Status Icons	15
2.1.2	Display Backlight	17
2.2	Navigating Handset	17
2.2.1	Entering Main Menu	18
2.2.2	Scrolling in Menus	18
2.2.3	Confirming Choices	18
2.2.4	Navigating Cursor	18
2.2.5	Adjusting Volumes	18
2.2.6	Returning to Previous Menu	18
2.2.7	Leaving Menus	18
2.2.8	Shortcuts	18
3	Basic Handset Options	20
3.1	Turning Handset On/Off	20
3.2	Adjusting Speaker Volume	21
3.3	Locking Keypad	21
4	Making Calls	21
4.1	Off Hook Dialling (Dial Directly)	22
4.2	On Hook Dialling (Pre-Dial)	22
4.3	Dial from Phone Book	22
4.4	Dial from Call List	22
4.5	Dial from Call Register	23
4.6	Redial	23
4.7	Speed Dial	24
5	Answering Calls	24
5.1	Auto Answer	24
5.2	Mute a Call	24
5.3	Reject a Call	24
5.4	Redirect a Call	25
6	During Calls	25
6.1	Turning Loudspeaker On/Off	25
6.2	Turning Microphone Mute On/Off	25
6.3	Entering Phone Book	25
7	Using the Menu	26
7.1	Description of Menus	26

7.1.1	Phone Book	26
7.1.2	Call Register	26
7.1.3	Messages	26
7.1.4	MSF Function	27
7.1.5	External Services	27
7.1.6	Status	27
7.1.7	Settings	27
7.2	List of Menu Functions	27
8	Phone Book	29
8.1	Using the Alphanumeric Keyboard	29
8.2	Managing an Existing Contact	29
8.2.1	Finding Contact in Phone Book	29
8.2.2	Dialing Contact from Phone Book	30
8.2.3	Editing Name/Number	30
8.2.4	Adding New Number	30
8.2.5	Adding to Speed Dial	31
8.2.6	Deleting Number	32
8.2.7	Deleting Speed Dial	32
8.2.8	Deleting Contact	32
8.3	Adding New Contact	33
9	Call Register	33
9.1	Incoming Calls	34
9.1.1	Viewing List of Incoming Calls	34
9.1.2	Adding an Incoming Call to Phone Book	34
9.1.3	Deleting an Incoming Call from List	34
9.2	Outgoing Calls	35
9.2.1	Viewing List of Outgoing Calls	35
9.2.2	Adding an Outgoing Call to Phone Book	35
9.2.3	Deleting an Outgoing Call from List	36
9.3	Missed Calls	36
9.3.1	Viewing List of Missed Calls	36
9.3.2	Adding a Missed Call to Phone Book	36
9.3.3	Deleting a Missed Call from List	37
9.4	Delete	37
9.4.1	Deleting All Incoming Calls	37
9.4.2	Deleting All Outgoing Calls	37
9.4.3	Deleting All Missed Calls	38
9.4.4	Deleting All Calls from All Lists	38
10	Messages	38
10.1	Writing and Sending a New Message	39
10.1.1	Clearing Text Field	39
10.2	Saving a New Message in Outbox	40
10.3	Saving a New Message as a Template	40
10.4	Saving a Received Message as a Template	40
10.5	Sending Messages Using Templates	41
10.6	Reading a Message	41
10.6.1	Reading a Long Message	42

10.6.2	Reading a Short Message	42
10.6.3	Reading a Call Back Message	43
10.7	Replying a Message	43
10.7.1	Reply Using an Empty Screen	43
10.7.2	Reply in Continuation of Original Text	43
10.7.3	Reply Using a Template	44
10.8	Forwarding a Message	44
10.9	Resending a Message	45
10.10	Erasing a Single Template	45
10.11	Erasing a Single Message	46
10.12	Erase All Read Messages from Inbox	46
10.13	Erase All Messages from Inbox	46
10.14	Erase All Messages from Outbox	47
10.15	Erase All Messages	47
11	Status	47
11.1	Silent	47
11.2	Headset	48
11.3	Auto Answer	48
11.4	Battery	48
11.5	Ringing Tone	48
11.6	Volume	48
11.7	Firmware Version	48
12	Settings	49
12.1	Ringing Volume	49
12.2	Ringing Tone	49
12.3	Alerting Volume	49
12.4	Vibrator	50
12.5	Silent Mode	50
12.5.1	Changing Settings of Silent Mode	51
12.6	Auto Key Lock	51
12.7	Backlight	51
12.7.1	Setting Backlight at Dimmed	52
12.7.2	Turning Backlight Off	52
12.7.3	Adjusting Backlight Delay	52
12.8	Auto Answer	52
12.8.1	Changing Settings of Auto Answer	53
12.9	Out of Range	53
12.9.1	Changing Settings of Out of Range	54
12.10	Bluetooth (only KIRK 5040)	54
12.10.1	Activate Bluetooth Function	54
12.10.2	Pair Wireless Headset with the Handset	55
12.10.3	Deactivate Bluetooth	55
12.10.4	Activate Bluetooth Again	55
12.10.5	Disconnect Wirelees Headset.	56
12.10.6	Connect Wireless Headset again	56
12.10.7	Remove Wireless Headset from the Device List	56
12.10.8	Auto Connect	56

12.10.9	Wireless Headset Volume	57
12.10.10	Switch Between Wireless Headset and Handset	57
12.10.11	Last Number Redial	57
12.11	Advanced...	57
12.11.1	Language	58
12.11.2	Any Key Answer	58
12.11.3	Long Key	58
12.11.4	Login	58
12.11.5	Time & Date	60
13	General Information	62
13.1	Troubleshooting	62
13.2	Information	62
13.2.1	Error information	62
13.2.2	Technical specification	63
13.2.3	International Regulatory and Product Information	63
13.2.4	Important Safety Instructions	67

1 Getting Started

Read all information in this section before you use your handset.

1.1 Handset Information

Danger: Ensure that the adapter voltage is the same as the electrical outlet voltage. The handset uses radio signals and does not guarantee a connection in all circumstances. Do not rely on a cordless handset to make emergency calls.

Never use your handset:

- in the vicinity of electrical detonators
- in shielded rooms
- in areas where radio transmission is forbidden
- in aircrafts

Do not place a handset near:

- water, moisture or damp areas
- heat sources, direct sunlight or unventilated areas
- devices which generate strong magnetic fields such as electrical appliances, fluorescent lamps, computers, radios, televisions or fax machines
- areas where the handset can be covered, its ventilation impaired, liquid spilled on the unit or objects inserted into the handset through any openings.
- areas with dust, vibration, shock or temperature extremes

Check for small metal objects in the handset earpiece/mouthpiece before using the handset.

Do not store or locate flammable liquids, gases, or explosive materials in the same compartment or vicinity as the cordless handset, its parts or accessories.

1.2 Charger Information

Two types of chargers can be used for the handset. An ordinary charger and a USB charger. The USB charger supports a PC phone book management program, provided for the system administrator.

Location	Type	Part Number
USA	Ordinary charger	84642472
Countries outside the USA	Ordinary charger	84642464

USA	USB charger	84642473
Countries outside the USA	USB charger	84642466
USA	Power supply	84642471
EU	Power supply	84642469
UK	Power supply	84642470
All	USB cable	84718504

1.3 Battery Information

Read the following information before you handle the batteries:

- Do not leave a battery where it could be subjected to extremely high temperatures.
- Do not charge battery when the ambient room temperature is above 40°C/104°F or below 5°C/41°F.
- Do not replace batteries in potentially explosive environments, such as rooms where flammable liquids or gases are present.
- The battery will explode if disposed of in a fire.
- Do not charge batteries unless you use the approved charger and the proper batteries.
- Only use the original lithium battery type **84743418 (ICP73048)** in the 5020 / 5040 Handset. Do not use these batteries with other products. These batteries were designed specifically for use with the 5020 / 5040 Handset and the 5020 / 5040 charger ONLY. Improper use of the batteries may result in explosion and fire hazard. Do not do anything that would cause the battery to short circuit.
- Do not let battery or charger come into contact with conductive metal objects.
- Do not attempt to take battery apart.
- Power handset off before removing the battery.

1.4 Installing Battery

Before using the handset, it is necessary to install the battery.

- 1 To install battery press down back cover and slide it towards the bottom of the handset.



- 2 Lift off back cover.



- 3 Insert battery with the label readable. Align the contacts of the battery with the corresponding connectors on the battery compartment and insert in the direction of the arrow.

Warning: Make sure that the contacts of the battery and the connectors of the battery compartment are aligned before sliding the battery in the direction of the arrow.

- 4 Press back cover back in locked position (when you hear a click the back cover is in position).

Note: The product label, including the CE logo, can be found in the battery compartment.

1.5 Charging Battery

When charging battery for the first time, it is necessary to leave handset in charger for 14-16 hours for the battery to be fully charged.

During normal operation, it takes approximately 6 hours to charge the handset from fully discharged to its full capacity. Turning the backlight off reduces charging time



with approximately 2 hours (refer to “Turning Backlight Off” on page 52).

- Place handset in charger.



For correct charging, be sure the room temperature is between 0°C/32°F and 40°C/104°F. Do not place the handset in direct sunlight. The battery has a built-in heat sensor which will stop charging if the battery temperature is too high.

If the handset is turned off when placed in charger, nothing indicates the charging. There will be no reaction on incoming calls.

If the handset is turned on when charging, the display shows the blue charging icon  in the status bar. The charging icon is replaced by the green fully charged icon  when the battery is fully charged (when handset is removed from charger, the charging icon disappears). The handset will not vibrate. Auto answer is inactive. The handset reacts normally for incoming calls.

It is necessary to recharge battery when display shows the battery low icon , or if the handset cannot be turned on.

1.6 Battery Capacity

The capacity of the battery depends on the use of backlight and talk time.

Battery capacity in active mode:

- 5020: up to 20 hours of talk time. 5040: up to 15 hours of talk time.

Battery capacity in standby mode:

- 5020: 200 hours when display backlight is turned off. 5040: 100 hours when display backlight is turned off.
- 5020: 100 hours when display backlight is set at dimmed. 5040: 60 hours when display backlight is set at dimmed.

For information about how to check battery capacity, refer to [“Battery” on page 48](#).


1.7 Battery Disposal

Lithium Ion batteries must be disposed of properly. Do not dispose of the batteries in office or household waste.

Lithium Ion batteries are recyclable. You can help preserve the environment by returning your unwanted batteries to your nearest recycling center for recycling or proper disposal.

Contact your system administrator for more information about battery disposal and recycling centers in your local area.

2> About Your 5020 / 5040 Handset

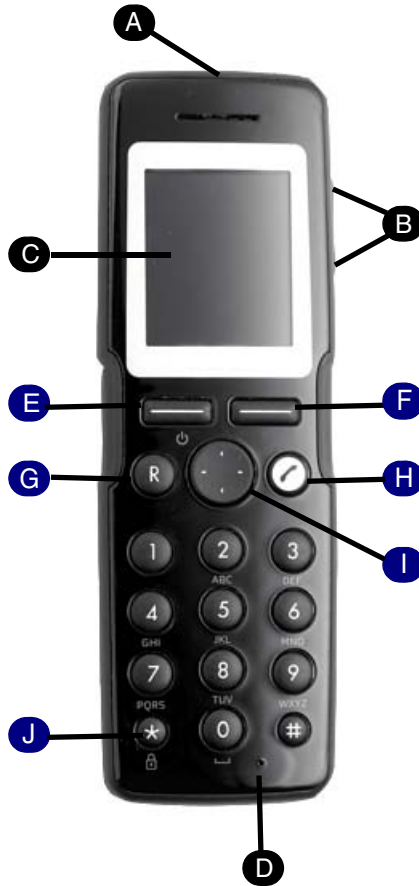

- A** Headset Connector (only 5020)
- B** Volume Control
Adjusts speaker volume.
- C** Display
Shows call information, handset status icons and guides you through option menus.
- D** Microphone

E Left Softkey

On hook (idle) Enters main menu.
OR
On hook is the term used when handset is in standby mode. Confirms choices in menu.
OR
used when handset is in standby mode. Turns handset off with a long (three second) key press.

Off hook (active) Mutes microphone
Off hook is the term used when handset is in active mode.

F Right Softkey

On hook (idle) Returns to previous menu.
Off hook (active) Turns loudspeaker on.

G Redirect

On hook (idle) Exits menu.
Off hook (active) Redirects calls.


H On/off Hook

I Four-Way Navigation Key

On hook (idle) Navigates menu.
OR
Adjusts volumes in menu.
OR
Moves cursor.
OR
Shortcuts to phone book, call register and missed call.
Off hook (active) Shortcut to phone book.

J Keypad Lock/Unlock

On hook (idle) Locks/unlocks keypad (Menu + Ø).

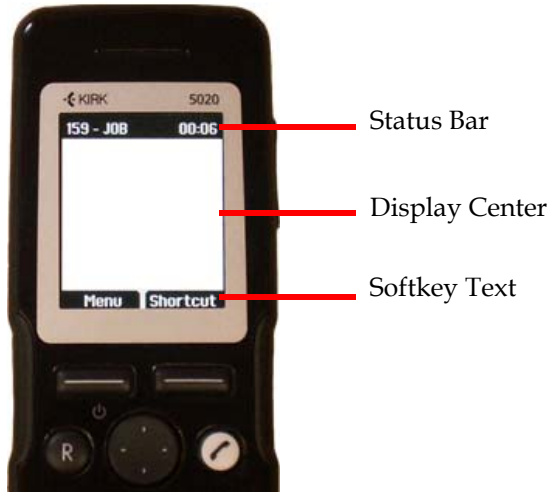

The display is divided in three parts: **Status bar**, **Display center** and **Softkey Text** (see figure above).

The types of information shown in Status bar when:

- on hook (idle) - display shows user ID, personal settings and time. If bluetooth activated (only 5040), the bluetooth icon is visible. If wireless headset connected (only 5040) the headset icon is visible.
- off hook - display shows user ID.

The types of information shown in Display center when:

- on hook (idle) - display shows standby logo or call information when receiving an incoming call
- off hook - display shows a telephone icon. If a wireless headset is connected to the handset (only 5040), the display shows a telephone icon if the audio is in the handset, and it shows a headset icon if the audio is in the headset.

The types of information shown in Softkey text when:

- on hook (idle) - display shows **Menu** and **Shortcut**

Menu: Menu gives access to the different functions of the handset. For more information about the content of the menu, refer to [“Using the Menu” on page 26](#). For information about how to navigate the menu, refer to [“Navigating Handset” on page 17](#).

Shortcut: Personal shortcuts consist of functions you have chosen to add to a list of shortcuts. For more information, refer to [“Personal Shortcuts” on page 19](#).

- off hook - display shows various terms according to the context of the specific function.

2.1.1 Status Icons

The following icons may appear in Status bar or Display center:



The low signal icon indicates that the handset soon will be out of coverage.



The no signal icon indicates that handset is out of coverage, or that the system is busy (no speech channels available).



The low battery icon indicates that battery capacity is low.



The telephone icon will appear when you miss a call.



The telephone icon will appear when an incoming call arrives.



The telephone icon will appear when you make a call.



The telephone icon will appear when the handset is off hook or a call is connected.



The envelope icon will appear when you receive a message.



The charging icon will appear when the handset is placed in charger.



The fully charged icon will appear when the battery is fully charged.



The key lock icon indicates that the entire keypad is locked.



The silent icon will appear when all sounds are disabled.



The loudspeaker icon will appear when loudspeaker is turned on.



The mute icon will appear when mic mute is turned on. Mic mute is a abbreviation of microphone mute.



The bluetooth icon will appear when bluetooth is activated. However, when wireless headset is connected, the bluetooth icon disappears.



The headset icon will appear when the wireless headset is connected.

2.1.2 Display Backlight

The display backlight automatically turns on when an incoming call or message arrives, or if a key is pressed.

The backlight turns off when the handset is idle after a preset period of time delay.

You can disable the backlight to save power, refer to [“Turning Backlight Off” on page 52](#) for more information.

2.2 Navigating Handset

The main part of the functions of the handset are grouped into different menus. In the following sections you will find a description of how to navigate these menus. For more information about the content of the different menus, refer to [“Using the Menu” on page 26](#).

You navigate the handset using two softkeys and a four-way navigation key. The figure below illustrates the connection between these keys and the text shown in display.

Left Softkey

Pressing left softkey activates left softkey text.

Use left softkey to enter main menu. When in menu, use the key to confirm your choices.



Right Softkey

Pressing right softkey activates right softkey text.

Use right softkey to enter list of personal shortcuts. When in menu, use the key to return to previous menu.

Four-Way Navigation Key

Use the key to move around in menus. The four lines on the key illustrate the directions you move when pressing the key.

The handset also offers both personal and predefined shortcuts to selected functions in the menu. In the end of this chapter, you will find a section describing how to use these shortcuts.

2.2.1 Entering Main Menu

- To enter main menu press left softkey to activate **Menu**.

2.2.2 Scrolling in Menus

- When in menu, press top or bottom of navigation key to scroll up and down in menu.

2.2.3 Confirming Choices

- When in the relevant menu, press left softkey to confirm your choices.

Various terms are being used in the softkey text according to the context of the specific function.

2.2.4 Navigating Cursor

- When in the relevant menu, press left or right side of navigation key to move cursor from side to side.

This is especially relevant when you are writing/editing words or entering/editing numbers and want to delete a letter or digit.

- To delete, simply place cursor behind letter or digit and press right softkey to activate **Delete**.

2.2.5 Adjusting Volumes

- When in the relevant menu, press left or right side of navigation key to adjust ringing and alerting volumes.
- Press left side to turn volume down, or press right side to turn volume up.

2.2.6 Returning to Previous Menu

- When in menu, press right softkey to activate **Back** or **Exit**. You now return to previous menu.

2.2.7 Leaving Menus

- To leave menu, press the **R** key. This key will exit menu at once.

2.2.8 Shortcuts

The handset contains two types of shortcuts:

- Personal shortcuts

Personal shortcuts consist of functions you have chosen to add to a list of shortcuts. The list is assigned to the right softkey.

- Predefined shortcuts

Predefined shortcuts are unchangeable and assigned to different keys on the handset.

2.2.8.1 *Personal Shortcuts*

By adding specific functions to the list of shortcuts, you get quick access to functions you often use.

Note: Personal shortcuts can only be used when handset is in standby mode (on hook).

In the following you will find a description of how to add, use and remove personal shortcuts.

To add a shortcut:

While on hook, press **Shortcut** to enter the shortcut function.

Scroll to **Edit shortcuts** and press **Select**.

Scroll to the function, you want to make a shortcut to.

Press **Select** to add the function to the list of personal shortcuts.

To use a shortcut:

While on hook, press **Shortcut** to enter the shortcut function.

Scroll to the desired shortcut and press **Select**.

To remove a shortcut:

While on hook, press **Shortcut** to enter the shortcut function.

Scroll to **Edit shortcuts** and press **Select**.

Scroll to the desired shortcut and press **Select** to remove the function from the list of shortcuts.

2.2.8.2 Predefined Shortcuts

Predefined shortcuts are unchangeable and assigned to different keys.

In the following you will find a list of predefined shortcuts and a description of how to access and use them.

Call list: While on hook, press left side of navigation key to enter call list.

Incoming calls are illustrated with green arrows

Outgoing calls are illustrated with blue arrows


Missed calls are illustrated with red arrows

Exit menu: When in menu, press **R**.

Find name: While on or off hook, press top or bottom of navigation key.

Press bottom of navigation key to start at the top of name list with the letter a.

Press top of navigation key to start at the bottom of name list with the letter z.

Keypad locked/unlocked: While on hook, press **Menu** followed by ***** (Display shows the key lock icon  followed by the text **Keypad locked/unlocked**).

Missed calls: While on hook, press right side of navigation key to enter a list of missed call.

Redirect a call: While on a call, press **R**. The feature is system dependent.

Save name and number: While on hook, enter number and press **Save**.

Silent on/off: While on hook, press **Menu** followed by **#**. (Display shows the silent icon  followed by the text **Silent mode on/of**, and a small icon is placed in status line).

Speed dial: While on hook, press digit equivalent to number of the contact in the speed dial list continuously until call is started.

3 Basic Handset Options

3.1 Turning Handset On/Off

To turn handset on:

- Press left softkey to turn on handset.

To turn handset off:

Press left softkey until the question '**Turn off?**' appears in display.

Press **Yes** to confirm.

Note: When you turn handset off, all content of call register and settings of time and date are deleted if the subscribed system does not resend the information to the handset.

3.2 Adjusting Speaker Volume

Adjusting speaker volume can only be done when handset is off hook. The handset will remember the speaker volume until you make a new adjustment.

During a telephone conversation you can adjust the speaker volume at any time in relation to the noise level of the surrounding environment.

Use key placed at the upper right side of handset for volume control.

To turn speaking volume up:

- While off hook, press top of key to turn up volume.

To turn speaker volume down:


- While off hook, press bottom of key to turn down volume.

3.3 Locking Keypad

Lock keypad to prevent keys from being accidentally pressed.

To lock/unlock keypad:

- Press **Menu** followed by ***** to lock keypad.
- Press **Unlock** followed by ***** to unlock keypad.

To answer a call when keypad is locked, press . When you end the call, the keypad automatically locks.

For automatic keypad lock, refer to "[Auto Key Lock](#)" on page 51.

4 Making Calls


The handset must be subscribed and registered to make a call. For more information about subscribing, refer to "[Creating a Login](#)" on page 59.

For internal calls, dial extension number. Contact your system administrator for a list of these extension numbers.


For external calls, dial external code (or line pool code) to access an external line, then dial external number. Contact your system administrator to confirm what external

code or line pool code to use.

4.1 Off Hook Dialling (Dial Directly)


Press  to make a call.

Dial number.

Press  to terminate the call.

4.2 On Hook Dialling (Pre-Dial)

Dial number.

Press  to make a call.

Press  to terminate the call.

4.3 Dial from Phone Book

The handset's phone book is familiar to an ordinary phone book. However, the find name function makes it easy to find a contact as you can jump directly to the desired contact using the quick search as described below.

Press **Menu** to enter main menu.


Scroll to **Phone Book** and press **Select**.

Scroll to **Find name** and press **Select**.


To find a name you can:

- Scroll until you reach the desired name. To scroll through the names quickly press the navigation key continuously.
- Use quick search by pressing the first letter(s) (max. 5 letters) of the desired name (refer to ["Using the Alphanumeric Keyboard" on page 29](#)).

5 Press .

6 If more than one number: scroll to the desired number and press .

7 The display icon  appears until call is connected.

8 Press  again to terminate the call.


Note: For more information about using your phone book, refer to ["Phone Book" on page 29](#).

Call list shows up to 40 of your latest incoming, outgoing and missed calls. When memory of call list is full, the handset will automatically erase the oldest call when a

new call is received in call list.

- Incoming calls are illustrated with green arrows
- Outgoing calls are illustrated with blue arrows
- Missed calls are illustrated with red arrows

To dial from call list:

- 1 While on hook, press left side of navigation key to enter call list.
- 2 Scroll to the desired name or number and press .


Note: When you turn off the handset, all content of call list is deleted if the subscribed system does not resend the information to the handset.

4.5 Dial from Call Register

The call register menu stores up to 40 of your incoming, outgoing and missed calls. The calls are classified in three groups: incoming calls, outgoing calls and missed calls.

If memory of call register is full, the handset will automatically erase the oldest call when a new call is received in call register. If you want to delete calls from call register manually, refer to [“Delete” on page 37](#).


To dial from call register:

- 1 Press **Menu** to enter main menu.
- 2 Scroll to **Call register** and press **Select**.
- 3 Scroll to the desired list and press **Select**.
- 4 Scroll to the desired name or number and press .

For more information about call register, refer to [“Call Register” on page 33](#).

Note: When you turn off the handset, all content of call register is deleted if the subscribed system does not resend the information to the handset.

4.6 Redial

- 1 Press **Menu** to enter main menu.
- 2 Scroll to **Call register** and press **Select**.
- 3 Scroll to **Outgoing calls** and press **Select**.
- 4 Scroll to the desired name or number and press .

4.7 Speed Dial


If you have assigned a number to one of the speed-dialing keys 0-9, do the following:


- While on hook, press digit equivalent to number of the contact in the speed dial list continuously until call is started.

Note: For more information about adding number to speed dial, refer to [“Adding to Speed Dial” on page 31](#).

5 Answering Calls

The handset must be subscribed and registered to answer a call. For more information about subscribing, refer to [“Creating a Login” on page 59](#).

When handset rings, display shows the icon for incoming calls  and the caller information appears below if supported by the subscribed system.

- Press  to answer a call when your handset rings.
- **Note:** You can distinguish between an internal and external call by the ring tone. The ring tone of an internal call is followed by three short beeps.

5.1 Auto Answer

When auto answer is turned on, the handset automatically goes off hook when an incoming call arrives.

If subscribed to a wireless solution, the handset automatically goes on hook when calls are terminated.

Press **Menu** to enter main menu.

Scroll to **Settings** and press **Select**.

Scroll to **Auto answer** and press **Select**.

Scroll to **On** or **Off** and press **Change**.

Note: When charging, auto answer is inactive.

5.2 Mute a Call

- Press **Silence** and the ring signal is muted.

5.3 Reject a Call

Note: Rejecting a call is system dependent. If supported by the subscribed system, do the following:

- Press **Reject** to refuse the call. The rejected call is registered as a missed call.

5.4 Redirect a Call

Note: Redirecting a call is system dependent. If supported by the subscribed system, do the following:

While on a call, press **R**.

Dial number of the person you want to redirect the call to and press **Ok**. If you want to withdraw the call, press **R**.

Press  to terminate the call.

6 During Calls

When you are on a call, you have three options as described in the following. Two of the options concern whether you want to make parts of a call public or personal. It is possible to turn both of these options on at the same time. The last and third option is to enter and use the phone book, while you are on a call.

6.1 Turning Loudspeaker On/Off

Turning loudspeaker on allows other people in the room to listen to and participate in the conversation. You may set the handset on a desk or table and leave your hands free.

To turn loudspeaker on/off:

While on a call, press **Loud on** to turn loudspeaker on.

To turn loudspeaker off, press **Loud off**.

6.2 Turning Microphone Mute On/Off

Turning microphone mute on will mute your voice. That is you can hear the other party but they cannot hear you.

While on a call, press **Mic Mute** to turn microphone mute on.

To turn microphone mute off, press **Mic on**.

6.3 Entering Phone Book

While on a call, you can access the find name function to scroll through names and numbers using predefined shortcuts (up/down navigation keys). For more information about entering phone book, refer to [“Predefined Shortcuts” on page 20](#). For more information about using phone book, refer to [“Phone Book” on page 29](#).

7 Using the Menu

The handset offers a range of functions that are grouped into menus. The main menu consists of seven menus: Phone Book, Call Register, Messages, MSF Function, External Services, Status and Settings.

For more information about accessing and navigating the menu, refer to [“Navigating Handset” on page 17](#).

Note: If handset is in menu mode, and an incoming call arrives, then menu will be dropped and the call handled as usual. When call is terminated, the handset returns to menu mode.

7.1 Description of Menus

In the following you will find a short description of the seven menus. For more information about a specific menu, see reference in the end of each description or [“List of Menu Functions” on page 27](#), which will give you a quick overview of the functions of each menu.

7.1.1 Phone Book

You can store numbers and names in your phone book.

The phone book can store up to 250 names with up to four numbers each. A maximum of 24 digits, including spaces, is allowed for each number. Names are sorted alphabetically starting with their first character.

For more information about using phone book, refer to [“Phone Book” on page 29](#).

7.1.2 Call Register

The call register keeps track of all your recent calls as it stores up to 40 of your incoming, outgoing and missed calls.

For more information about call register, refer to [“Call Register” on page 33](#).

7.1.3 Messages

If supported by the subscribed system, you can send and receive messages from the messages menu.

All messages is automatically stored in inbox or outbox. Messages can store up to 20 messages. A maximum of 72 letters, including spaces, is allowed for each message.

For more information about reading, writing and sending messages, refer to [“Messages” on page 38](#).

7.1.4 MSF Function

MSF Function is a special function based on MSF (Message Service Function). The function requires special software in the main system.

7.1.5 External Services

External Services are features placed in the main system, and only available if the handset is subscribed to a KIRK solution. External Services include: “View Clip Stack”, “Delete Clip Stack” and “Local Phone Book”. The Local Phone Book is a common phone book for all handsets subscribed to the actual system, and all handsets subscribed to the system are listed in the phone book. Additional numbers can be added to the phone book by the system administrator.

7.1.6 Status

Status provides a quick overview of some of the handset settings and works as a short-cut, which makes it easy to change the basic settings according to your needs. For more information about changing basic settings, refer to [“Status” on page 47](#).

7.1.7 Settings

Settings offer you the opportunity to customize the handset according to your needs. The settings can be changed at any time.

For more information about customizing the handset, refer to [“Settings” on page 49](#) or [“Advanced...” on page 57](#).

7.2 List of Menu Functions

In the following you will find a list of the different menu functions. The list gives a quick overview where to find the desired function of the handset.

Phone Book

- Find name

- Add name/number

- Speed dial

- Delete

Call Register

- Incoming calls

- Outgoing calls

- Missed calls

Delete

Messages

New message

Inbox

Outbox

Erase messages

Templates

MSF Function

Number:

Status

Silent

Headset

Auto answer

Battery

Ringing tone

Volume

Firmware version

Settings

Ringing volume

Ringing tone

Alerting volume

Vibrator

Silent mode

Auto key lock

Backlight

Auto answer

9 Out of range

10 Bluetooth

11 Advanced...

8 Phone Book

You can store numbers and names in your phone book.

The phone book can store up to 250 names with four numbers each. A maximum of 24 digits, including spaces, is allowed for each number. Names are sorted alphabetically starting with their first character.

If the display shows **Memory full**, it is necessary to delete one or more names from the phone book (refer to [“Deleting Contact” on page 32](#)).

8.1 Using the Alphanumeric Keyboard

The normal dialling keys (0-9) are used for writing the name to be placed in the phone book. By pressing the keys a certain number of times the related letters will appear in the display.

Spaces are made by using the 0-key.

Key ***** changes between uppercase and lowercase letters, which is indicated on the top left-hand corner of the display.

Pressing left or right side of navigation key will move the cursor.

To delete letters, place cursor behind letter and press **Delete**.

8.2 Managing an Existing Contact

The phone book menu offers a range of possibilities to manage existing contacts and makes it easy to add, edit or delete name and number.

Note: It is possible to add up to four numbers to a contact.

8.2.1 Finding Contact in Phone Book

The handset's phone book is familiar to an ordinary phone book. However, the find name function makes it easy to find a contact as you can jump directly to the desired contact using the quick search as described below.

Press **Menu** to enter main menu.

Scroll to **Phone Book** and press **Select**.

Scroll to **Find name** and press **Select**.

To find a name you can:

- Scroll until you reach the desired name. To scroll through the names quickly press the navigation key continuously.
- Use quick search by pressing the first letter(s) (max. 5 letters) of the desired name (refer to [“Using the Alphanumeric Keyboard” on page 29](#)).

Note: It is also possible to reach phone book without entering menu using a shortcut (refer to [“Predefined Shortcuts” on page 20](#)).

8.2.2 Dialing Contact from Phone Book

To dial from phone book, refer to [“Dial from Phone Book” on page 22](#).

8.2.3 Editing Name/Number

You can edit name and number of a contact in phone book at any time.

Press **Menu** to enter main menu.

Scroll to **Phone Book** and press **Select**.

Scroll to **Find name** and press **Select**.

To find a name you can:

- Scroll until you reach the desired name. To scroll through the names quickly press the navigation key continuously.
- Use quick search by pressing the first letter(s) (max. 5 letters) of the desired name (refer to [“Using the Alphanumeric Keyboard” on page 29](#)).

Press **Details**.

If more than one number: scroll to the desired number and press **Select**.

Scroll to **Edit name/number** and press **Select**.

Edit **Name** using the digits 0-9 (refer to [“Using the Alphanumeric Keyboard” on page 29](#)).

Scroll to **Number** and edit number using the digits 0-9.

Press **Save** to store your changes.

8.2.4 Adding New Number

You can add a new number to a contact in phone book at any time. It is possible to add up to four numbers to each contact.

Press **Menu** to enter main menu.

Scroll to **Phone Book** and press **Select**.

Scroll to **Find name** and press **Select**.

To find a name you can:

- Scroll until you reach the desired name. To scroll through the names quickly press the navigation key continuously.
- Use quick search by pressing the first letter(s) (max. 5 letters) of the desired name (refer to [“Using the Alphanumeric Keyboard” on page 29](#)).

Press **Details**.

If more than one number, press **Select**.

Scroll to **Add new number** and press **Select**.

Enter the new number using the digits 0-9 and press **Save**.

Repeat step 7-8 to add another number to the contact.

8.2.5 Adding to Speed Dial

You can assign a number to one of the speed-dialing keys 0-9. This way you only need to press a single digit to find name and number of the contact, you want to phone.

Note: A maximum of 10 speed dial numbers is allowed.

For more information about making a call using speed dial, refer to [“Speed Dial” on page 24](#).

Press **Menu** to enter main menu.

Scroll to **Phone Book** and press **Select**.

Scroll to **Find name** and press **Select**.

To find a name you can:

- Scroll until you reach the desired name. To scroll through the names quickly press the navigation key continuously.
- Use quick search by pressing the first letter(s) (max. 5 letters) of the desired name (refer to [“Using the Alphanumeric Keyboard” on page 29](#)).

Press **Details**.

If more than one number: scroll to the desired number and press **Select**.

Scroll to **Add to speed dial** and press **Select**.

Scroll to the desired position and press **Add name**.

If position is occupied, press **Yes** to replace existing speed dial.

8.2.6 Deleting Number

You can delete a single number at any time and still keep the rest of the belonging numbers of a contact. If you want to delete a contact and all belonging numbers, refer to [“Deleting Contact” on page 32](#).

Press **Menu** to enter main menu.

Scroll to **Phone Book** and press **Select**.

Scroll to **Find name** and press **Select**.

To find a name you can:

- Scroll until you reach the desired name. To scroll through the names quickly press the navigation key continuously.
- Use quick search by pressing the first letter(s) (max. 5 letters) of the desired name (refer to [“Using the Alphanumeric Keyboard” on page 29](#)).

Press **Details**.

If more than one number: scroll to the desired number and press **Select**.

Scroll to **Delete number** and press **Select**.

Press **Ok** to confirm.

8.2.7 Deleting Speed Dial

Use this function to delete a speed dial number, or replace it with a new speed dial when necessary. For more information about replacing a speed dial, refer to [“Adding to Speed Dial” on page 31](#).

Press **Menu** to enter main menu.

Scroll to **Phone Book** and press **Select**.

Scroll to **Delete** and press **Select**.

Scroll to **Speed dial number** and press **Select**.

Scroll to the desired speed dial number and press **Delete**.

8.2.8 Deleting Contact

Use the delete name and number function if you want to delete a contact and all the belonging numbers. If you only want to delete a single number and keep the contact and the rest of the belonging numbers, refer to [“Deleting Number” on page 32](#).

Press **Menu** to enter main menu.

Scroll to **Phone Book** and press **Select**.

Scroll to **Find name** and press **Select**.

To find a name you can:

- Scroll until you reach the desired name. To scroll through the names quickly press the navigation key continuously.
- Use quick search by pressing the first letter(s) (max. 5 letters) of the desired name (refer to [“Using the Alphanumeric Keyboard” on page 29](#)).

Press **Details**.

If more than one number, press **Select**.

Scroll to **Delete name/number** and press **Select**.

Press **OK** to confirm.

8.3 Adding New Contact

Use the add name/number function when you want to add a new contact to phone book.

Note: It is possible to add up to four numbers to a contact.

Press **Menu** to enter main menu.

Scroll to **Phone Book** and press **Select**.

Scroll to **Add name/number** and press **Select**.

Write the name of the contact using the digits 0-9 (refer to [“Using the Alphanumeric Keyboard” on page 29](#)).

Scroll to number and enter the number to be stored (max. 24 digits).

Press **Save** to store name and number.

Note: If display shows **Memory full**, it is necessary to delete one or more contacts from phone book (refer to [“Deleting Contact” on page 32](#)).

9 Call Register

The call register menu can store up to 40 of your incoming, outgoing and missed calls. Call register is divided into lists of: incoming calls, outgoing calls and missed calls.

If memory of call register is full, the handset will automatically erase the oldest call when a new call is received in call register. If you want to delete calls from call register manually, refer to [“Delete” on page 37](#).

Note: When you turn off the handset, all content of call register is deleted if the subscribed system does not resend the information to the handset.

9.1 Incoming Calls

Incoming call is a list of all your incoming calls sorted by date and time of the call, starting with the latest call.

If name and number of incoming call already exists in your phone book, the incoming call will be represented with the name of the contact. If name and number do not exist in your phone book, the handset cannot recognize the number and the incoming call will only be represented by the number.

In both cases, incoming call register provides details about incoming calls, such as time, date and length of conversation.

It is possible to add name and number of an incoming call to phone book or to delete an incoming call from the list.

9.1.1 Viewing List of Incoming Calls

Press **Menu** to enter main menu.

Scroll to **Call Register** and press **Select**.

Scroll to **Incoming Calls** and press **Select**.

9.1.2 Adding an Incoming Call to Phone Book

If you have an incoming call and the number is not in phone book it is possible to add it to phone book from the incoming call list.

Press **Menu** to enter main menu.

Scroll to **Call Register** and press **Select**.

Scroll to **Incoming Calls** and press **Select**.

Scroll to the desired call and press **Details**.

Press **Options**.

Scroll to **Add to phone book** and press **Select**

Write the name of the contact using the digits 0-9 (refer to ["Using the Alphanumeric Keyboard" on page 29](#)) and press **Save**.

9.1.3 Deleting an Incoming Call from List

Press **Menu** to enter main menu.

Scroll to **Call Register** and press **Select**.

Scroll to **Incoming Calls** and press **Select**.

Scroll to the desired call and press **Details**.

Press **Options** and scroll to **Delete from list**.

Press **Select** to confirm.

9.2 Outgoing Calls

Outgoing calls is a list of all your outgoing calls sorted by date and time of the call, starting with the latest call.

If name and number of the outgoing call already exists in your phone book, the outgoing call will be represented with the name of the contact. If name and number do not exist in your phone book, the handset can not recognize the number and the outgoing call will only be represented by the number.

In both cases, outgoing call register provides details about outgoing calls, such as time, date and length of conversation.

It is possible to add name and number of an outgoing call to your phone book, or to delete an outgoing call from the list.

9.2.1 Viewing List of Outgoing Calls

Press **Menu** to enter main menu.

Scroll to **Call Register** and press **Select**.

Scroll to **Outgoing Calls** and press **Select**.

9.2.2 Adding an Outgoing Call to Phone Book

If you have made a call and the number is not in phone book, it is possible to add it to phone book from the outgoing call list.

Press **Menu** to enter main menu.

Scroll to **Call Register** and press **Select**.

Scroll to **Outgoing Calls** and press **Select**.

Scroll to the desired call and press **Details**.

Press **Options**.

Scroll to **Add to phone book** and press **Select**.

Write the name of the contact using the digits 0-9 (refer to [“Using the Alphanumeric Keyboard” on page 29](#)) and press **Save**.

9.2.3 Deleting an Outgoing Call from List

Press **Menu** to enter main menu.

Scroll to **Call Register** and press **Select**.

Scroll to **Outgoing Calls** and press **Select**.

Scroll to the desired call and press **Details**.

Press **Options** and scroll to **Delete from list**.

Press **Select** to confirm.

9.3 Missed Calls

Missed calls is a list of all your missed calls sorted by date and time of the call, starting with the latest call.

If the name and number of the missed call already exists in your phone book, the missed call will be represented with the name of the contact. If the name and number do not exist in your phone book, the handset cannot recognize the number and the missed call will only be represented by the number.

In both cases, missed call register provides details about missed calls, such as time, date and length of conversation.

It is possible to add name and number of a missed call to your phone book or to delete a missed call from the list.

9.3.1 Viewing List of Missed Calls

Press **Menu** to enter main menu.

Scroll to **Call Register** and press **Select**.

Scroll to **Missed Calls** and press **Select**.

9.3.2 Adding a Missed Call to Phone Book

If you have a missed call and the number is not in phone book, it is possible to add it to phone book from the missed call list.

Press **Menu** to enter main menu.

Scroll to **Call Register** and press **Select**.

Scroll to **Missed Calls** and press **Select**.

Scroll to the desired missed call and press **Details**.

Press **Options**.

Scroll to **Add to phone book** and press **Select**.

Write the name of the contact using the digits 0-9 (refer to [“Using the Alphanumeric Keyboard” on page 29](#)) and press **Save**.

9.3.3 Deleting a Missed Call from List

Press **Menu** to enter main menu.

Scroll to **Call Register** and press **Select**.

Scroll to **Missed Calls** and press **Select**.

Scroll to the desired missed call and press **Details**.

Press **Options** and scroll to **Delete from list**.

Press **Select** to confirm.

9.4 Delete

The call register menu can store up to 40 of your incoming, outgoing and missed calls. If the memory of call register is full, the handset will automatically erase the oldest call when a new call need to be stored in the call register.

If you want to erase manually, use the following delete functions to empty lists in the call register.

9.4.1 Deleting All Incoming Calls

Press **Menu** to enter main menu.

Scroll to **Call Register** and press **Select**.

Scroll to **Delete** and press **Select**.

Scroll to **Incoming calls** and press **Select**.

Press **Yes** to empty list.

Note: If you only want to delete a single incoming call, see [“Deleting an Incoming Call from List” on page 34](#).

9.4.2 Deleting All Outgoing Calls

Press **Menu** to enter main menu.

Scroll to **Call Register** and press **Select**.

Scroll to **Delete** and press **Select**.

Scroll to **Outgoing calls** and press **Select**.

Press **Yes** to empty list.

Note: If you only want to delete a single outgoing call, see [“Deleting an Outgoing Call from List” on page 36.](#)

9.4.3 Deleting All Missed Calls

Press **Menu** to enter main menu.

Scroll to **Call Register** and press **Select**.

Scroll to **Delete** and press **Select**.

Scroll to **Missed calls** and press **Select**.

Press **Yes** to empty list.

Note: If you only want to delete a single missed call, see [“Deleting a Missed Call from List” on page 37.](#)

9.4.4 Deleting All Calls from All Lists

Press **Menu** to enter main menu.

Scroll to **Call Register** and press **Select**.

Scroll to **Delete** and press **Select**.

Scroll to **All calls** and press **Select**.

Press **Yes** to empty all folders.

10 Messages

If supported by the subscribed system, you can write, send and receive messages from the messages menu. You write messages using the alphanumeric keyboard. For more information, refer to [“Using the Alphanumeric Keyboard” on page 29.](#)

All messages are automatically stored in inbox or outbox.

The inbox is a list of all received messages, while outbox is a list of all sent messages. Both lists are sorted by time and date, starting with the latest.

If the name and number of the message already exists as a contact in your phone book, the message in the inbox or outbox will be represented with the name of the contact. If the name and number do not exist in your phone book, the handset cannot recognize the number and the message will only be represented by the number.

If you save a message in outbox for later handling, the message will be represented by the beginning of the text message.

Inbox and outbox can store up to 20 messages in total. A maximum of 72 letters, including spaces, is allowed for each message.

If the memory of inbox and outbox is full, the handset will automatically erase the oldest message when a new message need to be stored.

If you want to delete messages from inbox or outbox manually, refer to [“Erasing a Single Message” on page 46](#), [“Erase All Read Messages from Inbox” on page 46](#), [“Erase All Messages from Inbox” on page 46](#), [“Erase All Messages from Outbox” on page 47](#) and [“Erase All Messages” on page 47](#).

10.1 Writing and Sending a New Message

Press **Menu** to enter main menu.

Scroll to **Messages** and press **Select**.

Scroll to **New message** and press **Select**.

Write a message.

Optionally, you can use a template: Press **Options**, scroll to **Use template**, press **Select**, scroll to desired template, press **Options**, scroll to **Select** and press **Select**. For more information about templates, refer to [“Saving a New Message as a Template” on page 40](#), [“Saving a Received Message as a Template” on page 40](#), [“Sending Messages Using Templates” on page 41](#) and [“Erasing a Single Template” on page 45](#).

Press **Options** and scroll to **Send**.

Press **Select** and then press **Search** to find the receiver.


To find a name you can:

- Scroll until you reach the desired name. To scroll through the names quickly press the navigation key continuously.
- Use quick search by pressing the first letter(s) (max. 5 letters) of the desired name (refer to [“Using the Alphanumeric Keyboard” on page 29](#)).

Press **Select**.

If more than one number: scroll to desired number.

Press **Select** and then press **Send**.

When the message has been sent, the envelope icon  will appear. Press **Ok** to accept.

10.1.1 Clearing Text Field

Use the clear text function, when you are writing a new message and want to start all over.

Press **Options**.

Scroll to **Clear text** and press **Select**.

10.2 Saving a New Message in Outbox

You can write a message and then save it in outbox for later handling.

Press **Menu** to enter main menu.

Scroll to **Messages** and press **Select**.

Scroll to **New message** and press **Select**.

Write a message and press **Options**.

Scroll to **Save message** and press **Select**.

Scroll to **Outbox** and press **Select**.

10.3 Saving a New Message as a Template

After writing a message you can save it as a template for later use.

Press **Menu** to enter main menu.

Scroll to **Messages** and press **Select**.

Scroll to **New message** and press **Select**.

Write a message and press **Options**.

Scroll to **Save message** and press **Select**.

Scroll to **Templates** and press **Select**.

If memory is full: press **Ok**.

Scroll to the desired position and press **Select**.

10.4 Saving a Received Message as a Template

You can save a message from inbox as a template for later use.

Press **Menu** to enter main menu.

Scroll to **Messages** and press **Select**.

Scroll to **Inbox** and press **Select**.

Scroll to desired message and press **Select**.

Press **Options**.

Scroll to **Forward** and press **Select**.

Press **Options**.

Scroll to **Save message** and press **Select**.

Scroll to **Templates** and press **Select**.

10.5 Sending Messages Using Templates

You can create up to 10 templates in relation to the kind of message you often need to send. To create a new template, refer to [“Saving a New Message as a Template” on page 40](#) and [“Saving a Received Message as a Template” on page 40](#).

When using a template in a message you have two options:

- Use a template from the very beginning of the process (see below)
- Insert a template in a message when you are in the process of writing a message (refer to [“Writing and Sending a New Message” on page 39](#)).

To use a template in a message:

Press **Menu** to enter main menu.

Scroll to **Messages** and press **Select**.

Scroll to **Templates** and press **Select**.

Scroll to the desired template and press **Option**.

Scroll to **Select** and press **Select**.

If relevant, write additional text.

Press **Options**.

Scroll to **Send** and press **Select**.

Press **Search** to find the receiver.

To find a name you can:

- Scroll until you reach the desired name. To scroll through the names quickly press the navigation key continuously.
- Use quick search by pressing the first letter(s) (max. 5 letters) of the desired name (refer to [“Using the Alphanumeric Keyboard” on page 29](#)).

Press **Select**.

If more than one number: scroll to desired number.

Press **Select** and then press **Send**.

10.6 Reading a Message

In addition to the messages for general use as described in this chapter, you can receive other types of messages. These types of messages cannot be sent from your handset,

but are sent from an external application. The external applications may vary from system to system. For more information, please contact your system administrator.

Examples of messages sent from an external application are:

- Long messages

Long messages have a maximum length of 72 characters and are saved in inbox in the handset. If supported by the subscribed system, you can also write and send this type of messages from your handset.

- Short messages


Short messages have a maximum length of 36 characters and is not saved in the handset.

- Call back messages

Call back messages also contain contact information.

In the following, you will find a description of how to read the different types of messages.

10.6.1 Reading a Long Message

The envelope icon  appears in the display, when you receive a long message.

To read the long message:

Press **Details** to enter inbox.

Scroll to the desired message and press **Select**. Time and date of message is shown above the text message.

Note: New messages appear in the beginning of the list as they are sorted by time and date, starting with the latest.


Note: Read messages are marked with an **X** in inbox.

To read the long message later:

- If you want to read the message later, press **Exit**.

The envelope icon will then be placed in the status bar, indicating that there is an unread message in inbox.


10.6.2 Reading a Short Message

The envelope icon  and the text message appear in the display, when you receive a short message.


To delete the short message:

- Press **OK**.

10.6.3 Reading a Call Back Message

The envelope icon , text message and contact information appear in the display, when you receive a call back message. The display shows text message and contact information alternately.

To act on the call back message:

- Press  to call the call back number in the message.

To delete the call back message:

- Press **Ok**.

10.7 Replying a Message

When you want to reply a message from your inbox, you have three options:

- Write a new message in an empty screen
- Write in continuation of original text (received message)
- Insert a template

10.7.1 Reply Using an Empty Screen

Press **Menu** to enter main menu.

Scroll to **Messages** and press **Select**.

Scroll to **Inbox** and press **Select**.

Scroll to the desired received message and press **Select**.

Press **Options**.

Scroll to **Reply** and press **Select**.

Scroll to **Empty screen** and press **Select**.

Write a message and press **Options**.

Scroll to **Send** and press **Select**.

Press **Send**.

10.7.2 Reply in Continuation of Original Text

Note: Original text refers to the received text message.

Press **Menu** to enter main menu.

Scroll to **Messages** and press **Select**.

Scroll to **Inbox** and press **Select**.

Scroll to the desired received message and press **Select**.

Press **Options**.

Scroll to **Reply** and press **Select**.

Scroll to **Original text** and press **Select**.

Write a message in continuation of received message and press **Options**.

Scroll to **Send** and press **Select**.

Press **Send**.

10.7.3 Reply Using a Template

Press **Menu** to enter main menu.

Scroll to **Messages** and press **Select**.

Scroll to **Inbox** and press **Select**.

Scroll to the desired message and press **Select**.

Press **Options**.

Scroll to **Reply** and press **Select**.

Scroll to **Template** and press **Select**.

Scroll to the desired template and press **Options**.

Scroll to **Select** and press **Select**.

If relevant, write additional text.

Press **Options**.

Scroll to **Send** and press **Select**. Then press **Send**.

10.8 Forwarding a Message

If you want to forward a message to a contact, do the following:

Press **Menu** to enter main menu.

Scroll to **Messages** and press **Select**.

Scroll to **Inbox** and press **Select**.

Scroll to the desired received message and press **Select**.

Press **Options**.

Scroll to **Forward** and press **Select**.

Approvals

Access profile: EN 300444 V1.4.1:2002
EN 301 489 - 1: Version 1.4.1
EN 301 489 - 6: Version 1.2.1
Radio: EN 301 406 V1.5.1. 2003
Safety: EN 60950-1: 2001 + A11 + CORRIG

Size and weight

Size: 146 x 48 x 19mm

Weight: 110 g incl. battery \pm 10 g

Capacity


5020: Active talking time up to 20 hours. 5040: Active talking time up to 15 hours.

5020: Stand-by time up to 200 hours. 5040: Active talking time up to 100 hours.

Temperature and air pressure

Operating temperature: 0-40°C/32-104°F

Air pressure: Normal atmosphere condition

	This KIRK 5020 / 5040 Handset has been marked with the CE mark. This mark indicates compliance with EEC Directives 89/336/EEC, 73/23/EEC 1999/5/EC. A full copy of the Declaration of conformity can be obtained from Polycom Ltd, 270 Bath Road, Slough, Berkshire, SL1 4DX, UK.
--	---

Cesky [Czech]:	Polycom (UK) Ltd tímto prohlašuje, že tento KIRK 5020 / 5040 Handset je ve shodě se základními požadavky a dalšími příslušnými ustanoveními směrnice 1999/5/ES.
Dansk [Danish]:	Undertegnede Polycom (UK) Ltd erklærer herved, at følgende udstyr KIRK 5020 / 5040 Handset overholder de væsentlige krav og øvrige relevante krav i direktiv 1999/5/EF.
Deutsch [German]:	Hiermit erklährt Polycom (UK) Ltd, dass sich das Gerät KIRK 5020 / 5040 Handset in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der Richtlinie 1999/5/EG befindet.
Eesti [Estonian]:	Käesolevaga kinnitab Polycom (UK) Ltd seadme KIRK 5020 / 5040 Handset vastavust direktiivi 1999/5/EÜ põhinõuetele ja nimetatud direktiivist tulenevatele teistele asjakohastele sätetele.
English:	Hereby, Polycom (UK) Ltd. declares that this KIRK 5020 / 5040 Handset is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.
Español [Spanish]:	Por medio de la presente Polycom (UK) Ltd declara que el KIRK 5020 / 5040 Handset cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 1999/5/CE.
Ελληνική [Greek]:	ΜΕ ΤΗΝ ΠΑΡΟΥΣΑ Polycom (UK) Ltd ΔΗΛΩΝΕΙ ΟΤΙ KIRK 5020 / 5040 handset ΣΥΜΜΟΡΦΩΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 1999/5/EK.
Français [French]:	Par la présente Polycom (UK) Ltd déclare que l'appareil KIRK 5020 / 5040 Handset est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 1999/5/CE.
Italiano [Italian]:	Con la presente Polycom (UK) Ltd dichiara che questo KIRK 5020 / 5040 Handset è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 1999/5/CE.
Íslenska [Icelandic]:	Hér með lýsir Polycom (UK) Ltd yfir því að KIRK 5020 / 5040 Handset er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 1999/5/EC
Latviski [Latvian]:	Ar šo Polycom (UK) Ltd deklare, ka KIRK 5020 / 5040 Handset atbilst Direktīvas 1999/5/EK būtiskajām prasībām un citiem ar to saistītajiem noteikumiem.

Lietuviu [Lithuanian]:	Šiuo Polycom (UK) Ltd deklaruoja, kad šis KIRK 5020 / 5040 Handset atitinka esminius reikalavimus ir kitas 1999/5/EB Direktyvos nuostatas.
Nederlands [Dutch]:	Hierbij verklaart Polycom (UK) Ltd dat het toestel KIRK 5020 / 5040 Handset in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 1999/5/EG.
Malti [Maltese]:	Hawnhekk, Polycom (UK) Ltd, jiddikjara li dan [il-mudeltal-prodott] jikkonforma mal-htigijiet essenzjali u ma provvedimenti oħrajn rilevanti li hemm fid-Dirrettiva 1999/5/EC.
Magyar [Hungarian]:	Alulírott, Polycom (UK) Ltd nyilatkozom, hogy a KIRK 5020 / 5040 Handset megfelel a vonatkozó alapvető követelményeknek és az 1999/5/EC irányelv egyéb előírásainak.
Norsk [Norwegian]:	Polycom (UK) Ltd erklærer herved at utstyret KIRK 5020 / 5040 Handset er i samsvar med de grunnleggende krav og øvrige relevante krav i direktiv 1999/5/EF.
Polski [Polish]:	Niniejszym Polycom (UK) Ltd oświadcza, że KIRK 5020 / 5040 Handset jest zgodne z zasadniczymi wymaganiami oraz innymi stosownymi postanowieniami Dyrektywy 1999/5/WE
Português [Portuguese]:	Polycom (UK) Ltd declara que este KIRK 5020 / 5040 Handset está conforme com os requisitos essenciais e outras disposições da Directiva 1999/5/CE.
Slovensko [Slovenian]:	Polycom (UK) Ltd izjavlja, da je ta KIRK 5020 / 5040 Handset v skladu z bistvenimi zahtevami in ostalimi relevantnimi določili direktive 1999/5/ES.
Slovensky [Slovak]:	Polycom (UK) Ltd týmto vyhlasuje, že KIRK 5020 / 5040 Handset splna základné požiadavky a všetky príslušné ustanovenia Smernice 1999/5/ES.
Suomi [Finnish]:	Polycom (UK) Ltd vakuuttaa täten että KIRK 5020 / 5040 Handset tyyppinen laite on direktiivin 1999/5/EY oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.
Svenska [Swedish]:	Härmed intygar Polycom (UK) Ltd att denna KIRK 5020 / 5040 Handset står i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 1999/5/EG.

Explosive Device Proximity Warning



Warning Do not operate your wireless network device near unshielded blasting caps or in an explosive environment unless the device has been modified to be especially qualified for such use.

Waarschuwing	Gebruik dit draadloos netwerkapparaat alleen in de buurt van onbeschermde ontstekers of in een omgeving met explosieven indien het apparaat speciaal is aangepast om aan de eisen voor een dergelijk gebruik te voldoen.
Varoitus	Älä käytä johdotonta verkkolaitetta suojaamattomien räjäytysnallien läheisyydessä tai räjäytysalueella, jos laitetta ei ole erityisesti muunneltu sopivaksi sellaiseen käyttöön.
Attention	Ne jamais utiliser un équipement de réseau sans fil à proximité d'un détonateur non blindé ou dans un lieu présentant des risques d'explosion, sauf si l'équipement a été modifié à cet effet.
Warnung	Benutzen Sie Ihr drahtloses Netzwerkgerät nicht in der Nähe ungeschützter Sprengkapseln oder anderer explosiver Stoffe, es sei denn, Ihr Gerät wurde eigens für diesen Gebrauch modifiziert und bestimmt.
Avvertenza	Non utilizzare la periferica di rete senza fili in prossimità di un detonatore non protetto o di esplosivi a meno che la periferica non sia stata modificata a tale proposito.
Advarsel	Ikke bruk den trådløse nettverksenheten nært inntil uisolerte fenghetter eller i et eksplosivt miljø med mindre enheten er modifisert slik at den tåler slik bruk.
Aviso	Não opere o dispositivo de rede sem fios perto de cápsulas explosivas não protegidas ou num ambiente explosivo, a não ser que o dispositivo tenha sido modificado para se qualificar especialmente para essa utilização.
¡Advertencia!	No utilizar un aparato de la red sin cable cerca de un detonador que no esté protegido ni tampoco en un entorno explosivo a menos que el aparato haya sido modificado con ese fin.
Varning!	Använd inte den trådlösa nätverksenheten i närheten av oskyddade tändhattar eller i en explosiv miljö om inte enheten modifierats för att kunna användas i sådana sammanhang.



The WEEE Marking on this equipment indicates that the product must not be disposed of with unsorted waste, but must be collected separately.

Before using your telephone equipment, you should always follow basic safety instructions to reduce the risk of fire, electrical shock and injury to persons, and damage to property.

1. Read and understand all instructions
2. Follow all warnings and instructions including those marked on the product
3. Unplug this product before cleaning. Do not use liquid cleaners or aerosol cleaners. Use damp cloth for cleaning
4. Do not install the telephone equipment in the bathroom or near a wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool
5. Slots or openings in the equipment are provided for ventilation to protect it from over-heating. These openings must not be blocked or covered.
6. The product should be operated only from the type of power source indicated on the instructions. If you are not sure of the type of power supply, consult your dealer or local power company.
7. Do not overload wall outlets and extension cords as this can result in fire or electrical shock.
8. Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in fire, electrical shock, or injury. Never spill liquid of any kind into this product.
9. To reduce the risk of electrical shock or burns, do not disassemble this product. Opening or removing covers may expose you to dangerous voltages, dangerous electrical current, or other risks. Incorrect reassemble can cause electrical shock when the appliance is subsequently used. If the product need repair, consult your dealer.
10. Refer servicing to qualified service personnel.
11. Avoid using telephone during an electrical storm. There may be a risk of electrical shock from lightning.
12. Do not use the telephone to report a gas leak in the vicinity of the leak.
13. Do not place the base or charger near microwave ovens, radio equipment, or non-ground connected televisions.

These appliances may cause electrical interference to the base or handset

14. The charger must be placed on a hard, flat surface and connected to a functional 120 volt AC power source depending on the country of use.

15. This telephone will not operate in the event of a blackout. Please keep a backup phone for emergencies.
16. Installation must be performed in accordance with all relevant national wiring rules.
17. Plug acts as Disconnect Device - The socket outlet to which this apparatus is connected must be installed near the equipment and must always be readily accessible.
18. This device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.

13.2.4.1 Intrinsic safety

Do not use the handset in conditions where there is a danger of electrically ignited explosions.

Exposure to sunlight, heat and moisture

Do not expose the cordless phone to direct sunlight for long periods. Keep the cordless phone away from excessive heat and moisture.

Spare parts and accessories

Use only approved spare parts and accessories. The operation of non-approved parts cannot be guaranteed and may even cause damage.

Power failure

In the event of a power failure or flat battery, you cannot use the handset to make or receive calls.

Battery Precautions

1. Periodically clean the charge contacts on both the charger and handset.
2. Exercise care in handling batteries in order not to short the batteries with conducting materials such as rings, bracelets, and keys. The batteries or conducting material may overheat and cause burns or fire.
3. Do not open or mutilate the batteries, released electrolyte is corrosive and may cause damage to the eyes or skin. The electrolyte may be toxic if swallowed.
4. During charging batteries heat up. This is normal and not dangerous.
5. Lithium cell installation Caution - Danger of Explosion if Battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.

Notices

Before installing this equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations.

Repairs to certified equipment should be coordinated by a representative designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment.

Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines and internal metallic water pipe system, if present,

are connected together. This precaution may be particularly important in rural areas

EMC:CAUTIONS: Users should not attempt to make such connections themselves, but should contact the appropriate electric inspection authority, or electrician, as appropriate.

If your telephone equipment causes harm to the telephone network, the telephone company may ask you to disconnect the system from the line until the problem has been corrected or they may discontinue your service temporarily. If possible, they will notify you in advance. But if advance notice is not practical, you should be notified as soon as possible. You will be informed of your right to file a complaint with the FCC. Your telephone company may make changes in its facilities, equipment, operations, or procedures that could affect the proper functioning of your telephone system. If they do and it is possible, you will be notified in advance to give you an opportunity to maintain uninterrupted telephone service. If you experience trouble with this telephone system, disconnect it from the network until the problem has been corrected or until you are sure that the equipment is not malfunctioning.

Note: This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to local regulations. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Note: This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

SAR: Device has been tested for SAR compliance for head and body worn configurations. The highest reported SAR values are: head 0.049 W/kg (5020) / 0.206 W/kg (5040) and body worn 0.075 W/kg(5020) / 0.330 W/kg (5040).

IC Note: Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

The Term "IC": before the certification/registration number only signifies that the Industry Canada technical specifications were met.

Privacy of communications may not be ensured when using this telephone.

Power Outage: In the event of a power outage, your cordless telephone will not operate. The cordless telephone requires electricity for operation. You should have a telephone which does not require electricity available for use during power outages.

Information to user: The users manual or instruction manual for an intentional or unintentional radiator shall caution the user that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE EMC: Cet appareil a été soumis à un essai et jugé conforme aux normes régissant les limites établies pour un dispositif numérique de classe B, conformément aux règlements locaux. Ces limites visent à assurer une protection raisonnable contre des interférences pouvant nuire à l'appareil utilisé dans un secteur résidentiel. Cet équipement génère et utilise des radiofréquences, et peut en émettre. S'il n'est pas installé et utilisé selon les directives fournies, il risque de perturber les radiocommunications. L'exploitation de cet appareil dans un secteur particulier est toutefois susceptible de produire des interférences nuisibles. Si cet équipement provoque des interférences lors de la réception des radiofréquences ou des fréquences de télévision, ce qui peut être vérifié en mettant l'appareil hors tension, puis en le remettant sous tension, l'utilisateur doit prendre l'une des mesures suivantes pour corriger la situation:

- réorienter ou relocaliser l'antenne de réception;
- augmenter la distance entre l'appareil et l'antenne de réception;
- brancher l'appareil à une prise d'un circuit différent de celui auquel l'antenne est branchée;
- consulter le détaillant ou un technicien en radiotélévision d'expérience pour obtenir de l'aide.



©2007 Polycom, Inc. All rights reserved.

Specifications subject to change without notice.

Polycom Headquarters

4750 Willow Road
Pleasanton
CA 94588 (T)

Polycom (Denmark)

Langmarksvej 34
DK-8700 Horsens
Tel. +45 7560 2850
Fax +45 7560 2851
emeadk@polycom.com
www.polycom.com